




- Drill Hole In Concrete
- Make Sure Hole Is Clean And Free Of Any Dust
- Fill Hole With Epoxy
- Place Rod In Hole
- Make Sure Rod Is Plumb
- Allow Epoxy To Set For 12 Hours

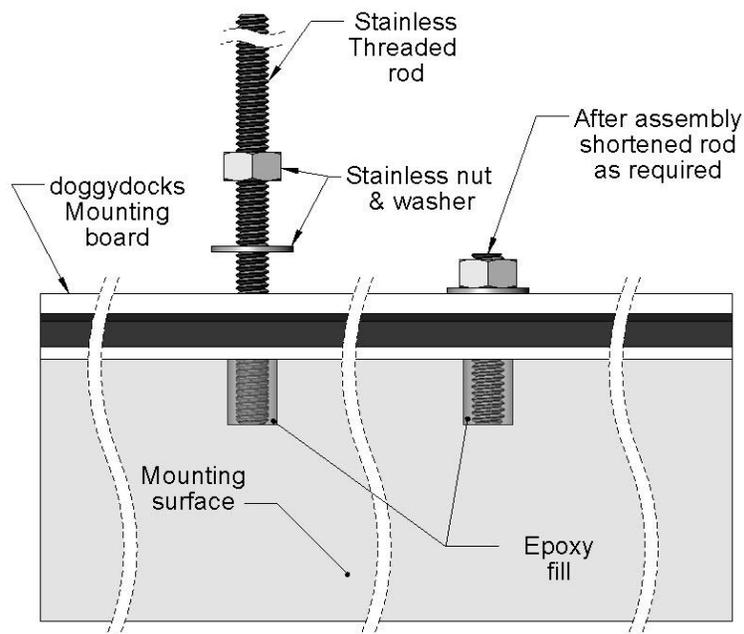

- Drill Holes In doggydocks To Match Holes In Concrete
- Place doggydocks Over Threaded Rod,
- Place Washer Tighten Nut Until doggydock Is Snug.
- Fill Hole With Epoxy
- Place Rod In Hole
- Make Sure Rod Is Plumb
- Allow Epoxy To Set For 12 Hours