




It is critical that the doggydocks is mounted on a level surface. If you are installing in a pool and you have curved coping you will need to construct a platform to level the area where the mounting board will sit.

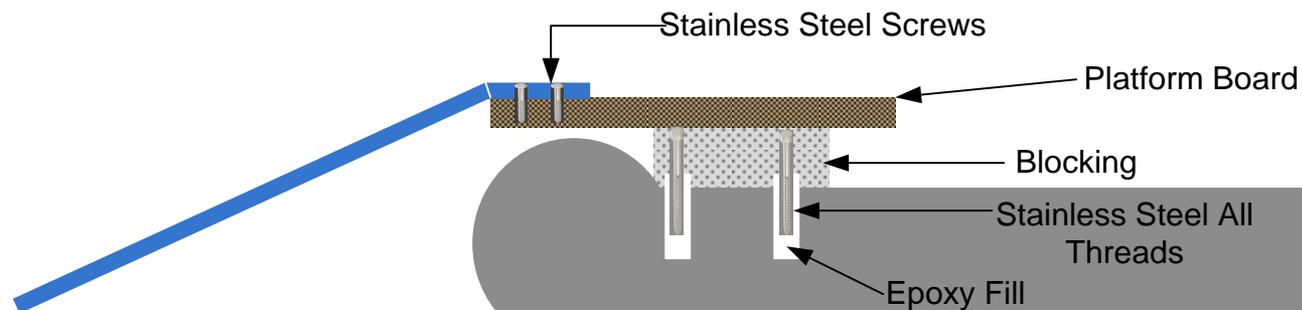

Instructions

1. Use Solid Blocking to Fill Space to top of Coping to Create a Level Mounting Surface. Drill through the solid blocking into concrete 1.5" Secure with Lag Bolts and Epoxy.
- 2 Fill Void Between Top of Blocking and Bottom of Mounting Board With a solid piece of Plywood. Use 2.5" Wood Screws to Secure Blocking.